
Body-Solid® Built for Life

SFID325

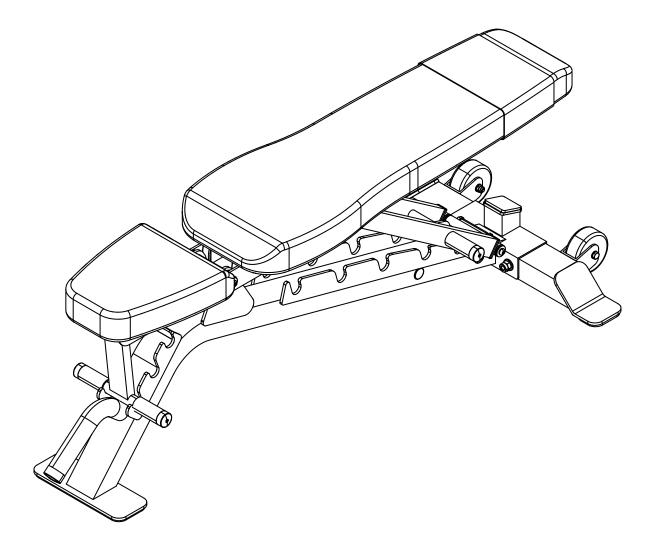

OWNER'S MANUAL

STEF

Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware in this step. <u>Do Not</u> wrench tighten until end of step 2.

A. Attach rear leg (C) to mainframe (A) as shown using:

two 18 (Hex Bolt M12 X 105mm)

four 23 (Flat Washer 12mm)

two 27 (Nylon Lock Nut M12)

B. Attach two End Cap (16) to Back Pad Support structure (B) handle as shown using: two 16 (End Cap Ø25)

two 29 (spring washer 6mm)

C. Attach two End Cap (16) to Seat Support Structure (D) handle as shown using:


two 16 (End Cap Ø25)


two 29 (spring washer 6mm)

D. Attach two End Cap (17) to mainframe (A) front handle as shown using:


one 17 (End Cap Ø30)

one 26 (spring washer 8mm)

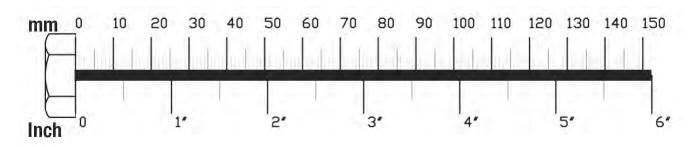

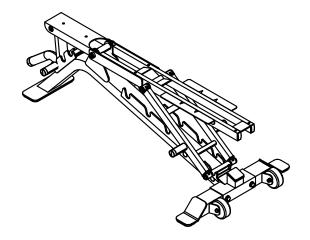

Above shows STEP 1 assembled and completed.

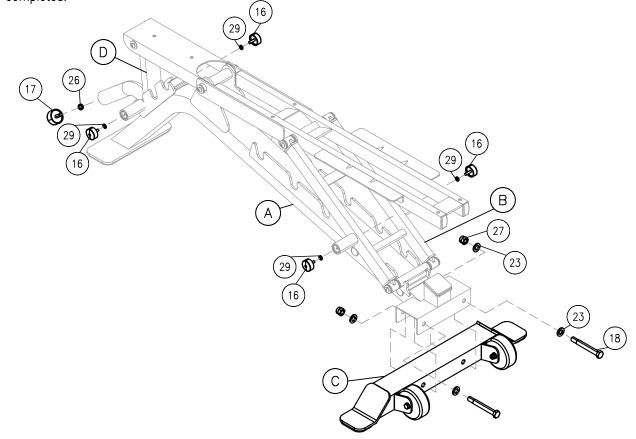

7

Be careful to assemble all components in the sequence they are presented.

NOTE:

Finger tighten all hardware in this step. <u>Do Not</u> wrench tighten until end of step 2.

A. Attach Back Pad (8) with Pad Wrap (9) to Back Pad Structure (E) as shown using:

four 20 (hex bolt M8 x 55 mm)

four 26 (spring washer 8mm)


four 25 (flat washer 8mm)


B. Attach Seat Pad (7) to Seat Pad Structure (F) as shown using:


two 21 (hex bolt M8 x 21 mm)


two 26 (spring washer 8mm)

two 25 (flat washer 8mm)

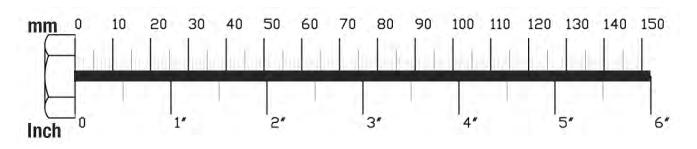

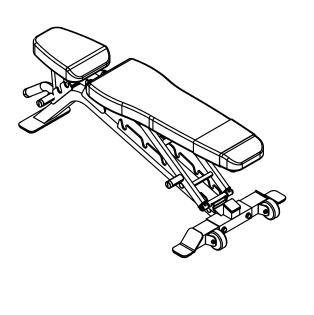


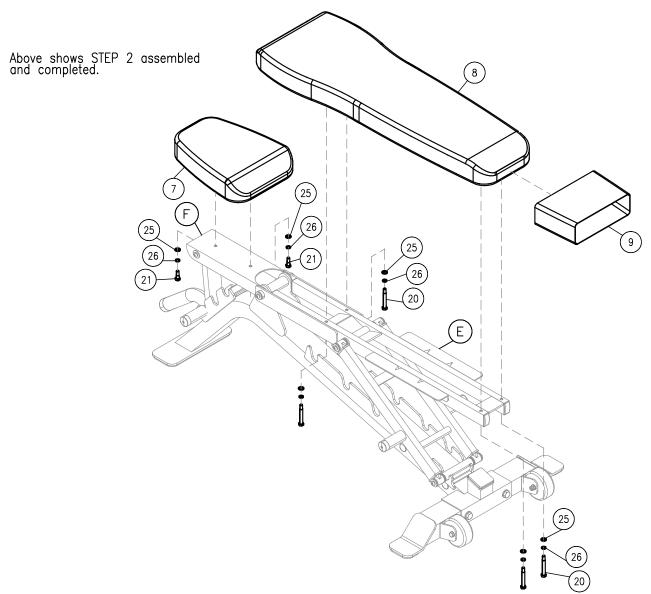

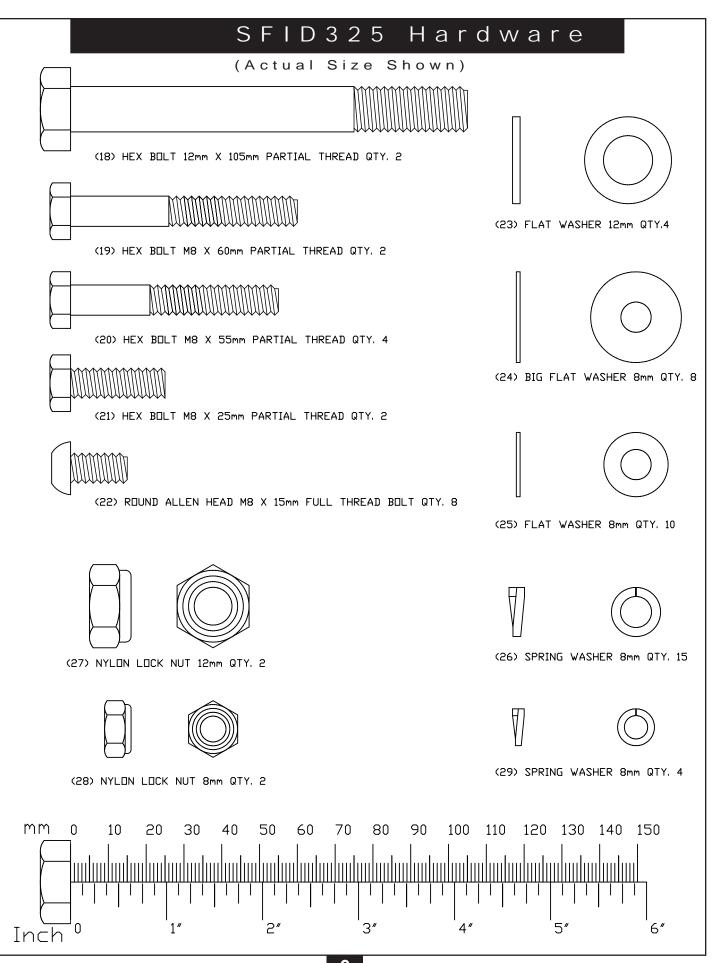

Mainframe Parts List

Part#	Qty	Description
1	2	shaft
2	4	Long Bushing
3	10	Short Bushing
4	2	Bushing Φ30
5	1	Seat Pad Struture Shaft
6	1	Main Pivot Shaft
7	1	Seat Pad
8	1	Back Pad
9	1	Pad Wrap
10	1	Back Frame Support Tubing
11	2	Back Pad Structure End Cap
12	2	Transfer Wheel
13	1	Front Handle Foam Grip
14	4	Side Handle Foam Grip
15	4	Plug
16	4	End Cap Φ25
17	1	End Cap Φ30
18	2	Hex Bolt M12 X 105mm
19	2	Hex Bolt M8 X 60mm
20	4	Hex Bolt M8 X 55mm
21	2	Hex Bolt M8 X 25mm
22	8	Round Allen Head Bolt M8 X 15mm
23	4	Flat Washer 12mm
24	8	Big Flat Washer 8mm
25	10	Flat Washer 8mm
26	1 4	Spring Washer 8mm
27	2	Nylon Lock Nut M12
28	2	Nylon Lock Nut M8
29	4	Spring Washer 6mm
30	2	Spring Washer 10mm
31	1	Round Allen Head Bolt M10 X 20mm
32	1	Back Pad Rubber Stopper
Α	1	Bottom Frame
В	1	Rear Frame
С	1	Rear Leg
D	1	Seat Pad Support Frame
Е	1	Back Pad Frame
F	1	Seat Pad Board

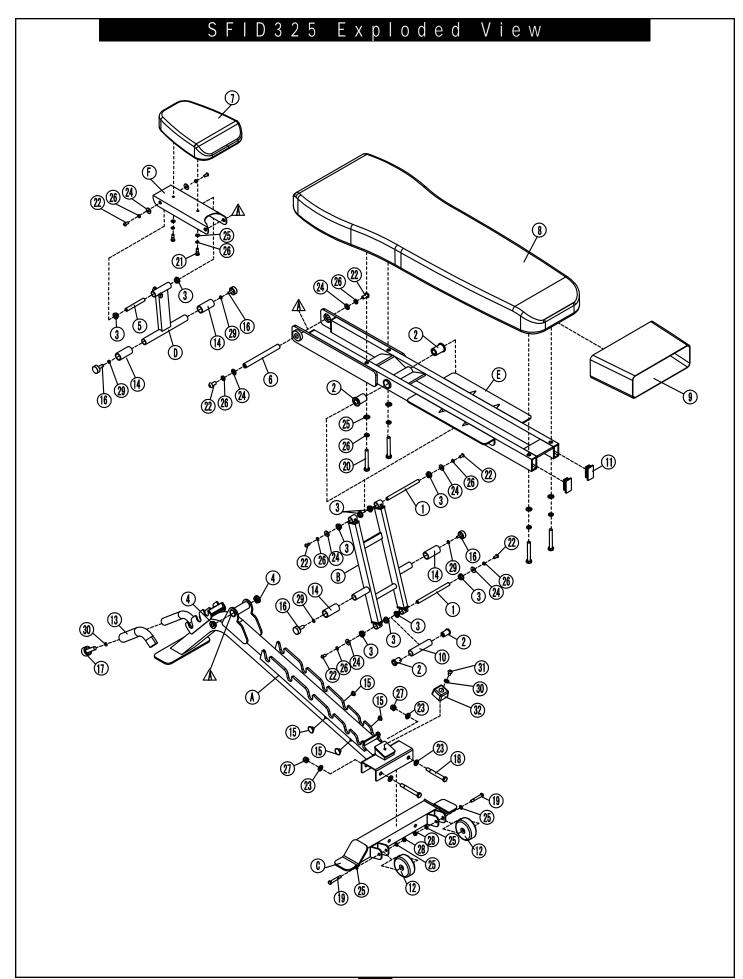

	NOTE	
		•



1900 S. Des Plaines Ave. Forest Park, Il 60130 1 (800) 556-3113

Hours: M-F 8:30 - 5:00

www.bodysolid.com